

No52 RS232 Control Codes
 9600 Baud
 8 Bits
 No Parity
 1 Stop Bit
 No Flow Control

INTENSITY	!1003
STANDBY	!1005
ENTER	!100F
SETUP	!1015
BALANCE	!102F
BALANCE	!102F
VOL_DOWN	!1030
VOL_UP	!1031
MUTE	!1032
MONO	!1033
POLARITY	!1034
PREV_IN	!1035
NEXT_IN	!1036
RECORD	!1037
OUT_STANDBY	!1038
IN_STANDBY	!1039
INPUT1	!103A
INPUT2	!103B
INPUT3	!103C
INPUT4	!103D
INPUT5	!103E
INPUT6	!103F
INPUT7	!1040
INPUT8	!1041
INPUT9	!1042
INPUT10	!1043
IN_MUTE	!1044
OUT_MUTE	!1045
REC_OFF	!1046
LINE_ON	!1047
REC_ON	!1048
OUT_BALANCE	!104A

